


**K316-D, K316-DL, K316-DMB, K316-DBN, K316-DWC****SUITS OVERFLOW AND NON OVERFLOW BASINS WITH 32MM WASTE****INSTALLATION**

1. Remove pop up waste lid and piston from the top section of the waste, screw it anticlockwise to remove. The Plastic lid cover can be left on during installation to prevent damage.
2. Top section of waste with foam seal goes above the basin.
3. Bottom section with clear silicon seal goes under the basin.
4. Use the 6mm screw from the top section to fasten the two pieces of the waste together with a screwdriver, do not use cordless or electric drivers to fasten the waste.
5. Replace pop up waste lid and piston.
6. Test the basin and waste to ensure it forms a water tight seal.

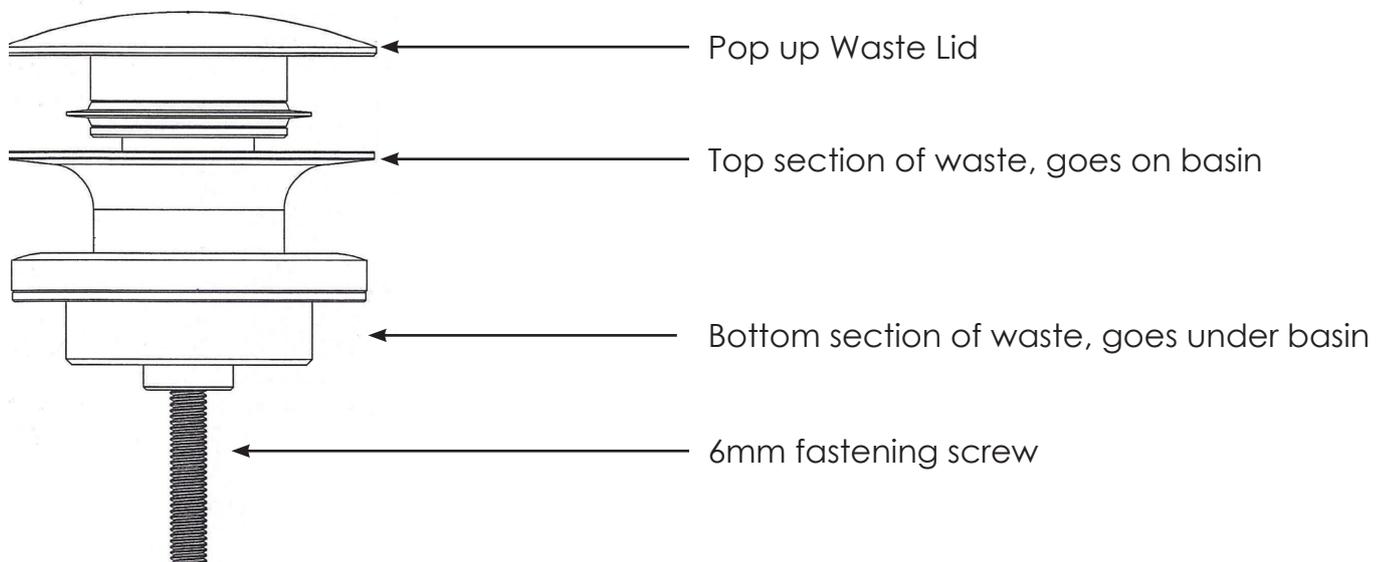

Please direct any feedback for this product to  
Customer Central: [support@customer-central.com.au](mailto:support@customer-central.com.au)  
or call 1300 364 748